


AIR COMMANDER™ AIR DISTRIBUTOR

with MASTER CONTROL and UNIVERSAL SEQUENTIAL

Page 2 of 3

PARTS LIST

Universal representation applicable to all versions. Quantities per and components required dependent on assembly being repaired.

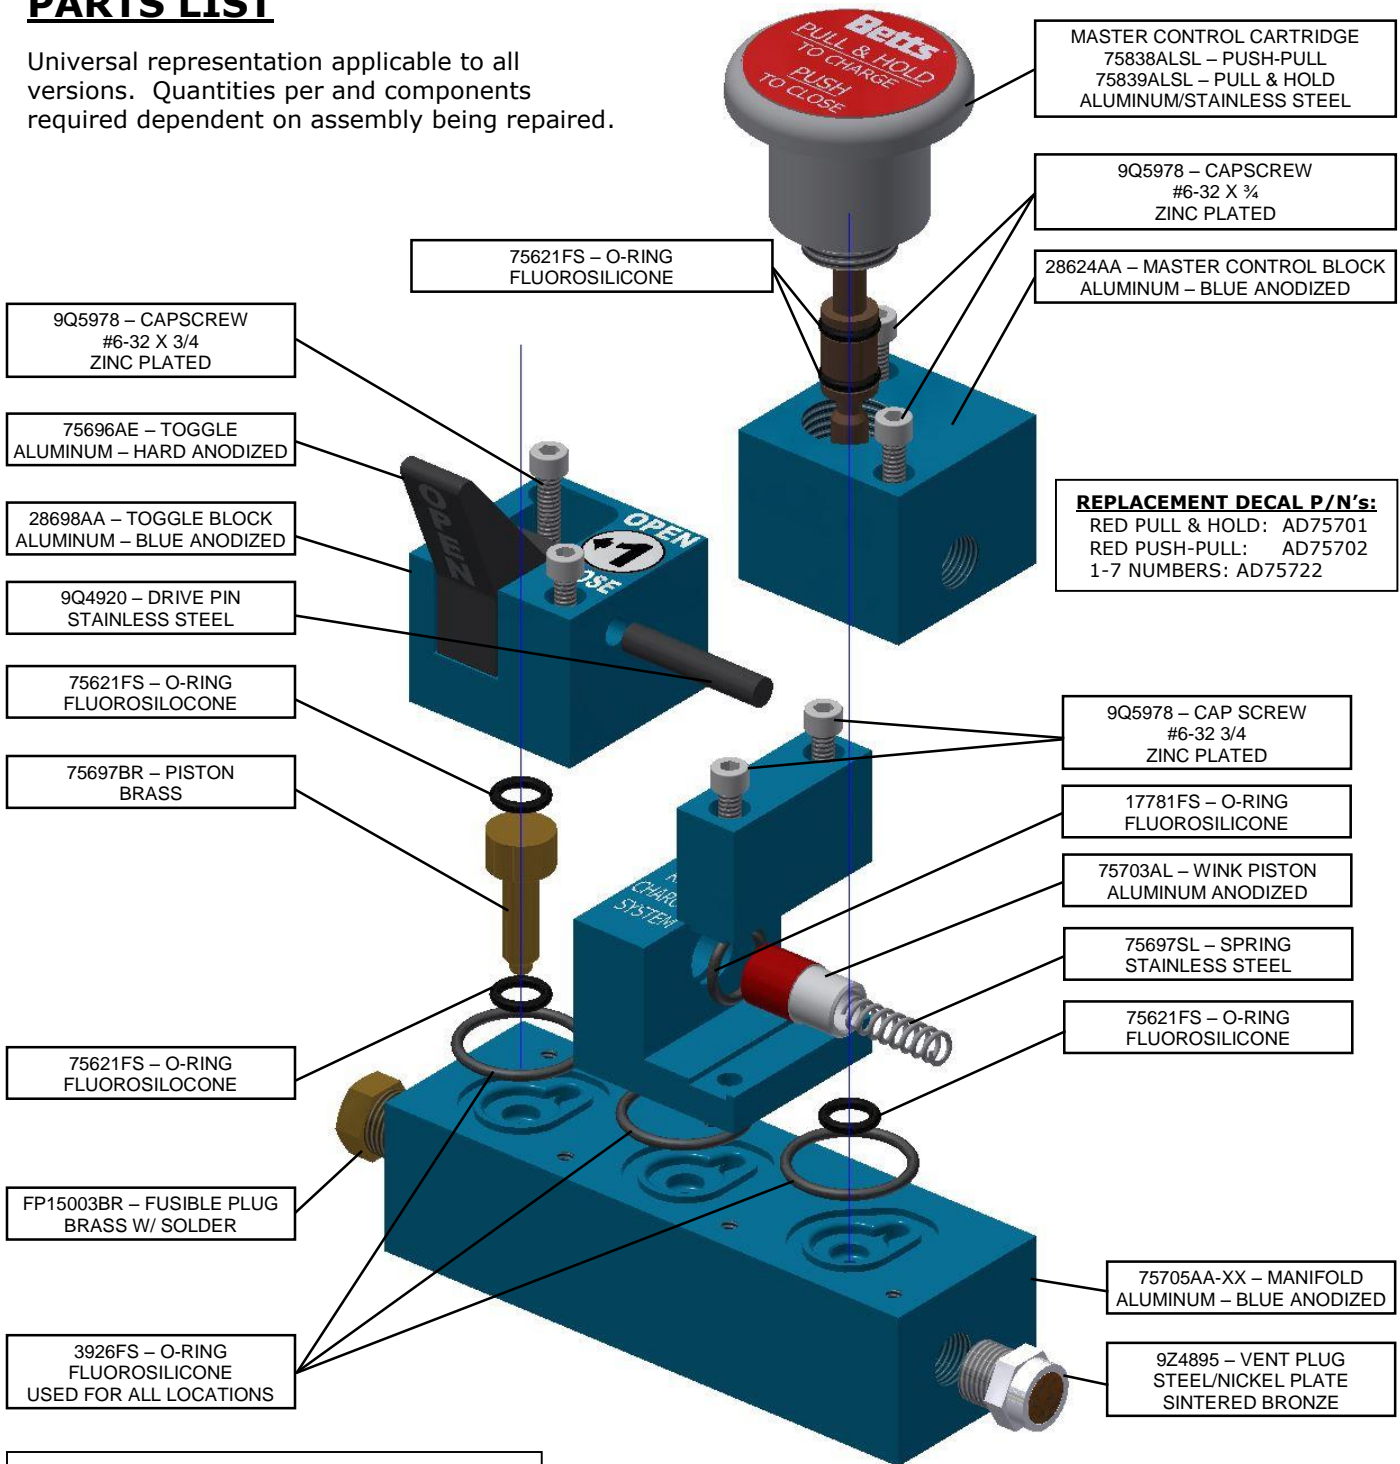

WARNING: Use only genuine Betts replacement parts. Use of substitute parts can impair the proper functioning of this product.



Designed, engineered and manufactured in the USA. 